

# MDP3858-U

# MDP3858SP-U

# MDP3858V-U

## **FAX/MODEM CARD**

---



## **Easy Start**

---

## **Read Me First**

---

Version 1.0

- WINDOWS® 95 IS A REGISTERED TRADEMARK OF MICROSOFT CORP.
- ALL OTHER COMPANY OR PRODUCT NAMES ARE TRADEMARKS OR REGISTERED TRADEMARKS OR SERVICE MARKS OF THEIR RESPECTIVE OWNERS.

## **INSTALLATION NOTES**


- Your fax/modem card is Plug-and Play-based. While it should work with most systems, it is recommended to install the fax/modem card on a system with PnP capabilities.
- Computers come in different shapes and sizes. Therefore, the installation instructions in this booklet apply generally and you should compare the drawings here with your computer before you begin.
- You will require a Philips Screwdriver to complete the installation. You may want to refer to your computer user's guide during the installation.

## **SAFETY PRECAUTION**

Static electricity can cause permanent damage to your fax/modem card. To prevent such a damage, you must ground yourself while installing the fax/modem card. You can do this in either of two ways :


- Use a grounding strap, which is a coiled wire with a clip at one end and an elastic strap at the other. Wear the strap around your wrist and attach the clip to any non-painted metal surface of the computer's chassis.
- If you do not have a grounding strap, touch any non-painted surface of the computer's chassis before you begin installation, and again every minute or so until the installation is completed.

## INSTALLING THE FAX/MODEM CARD

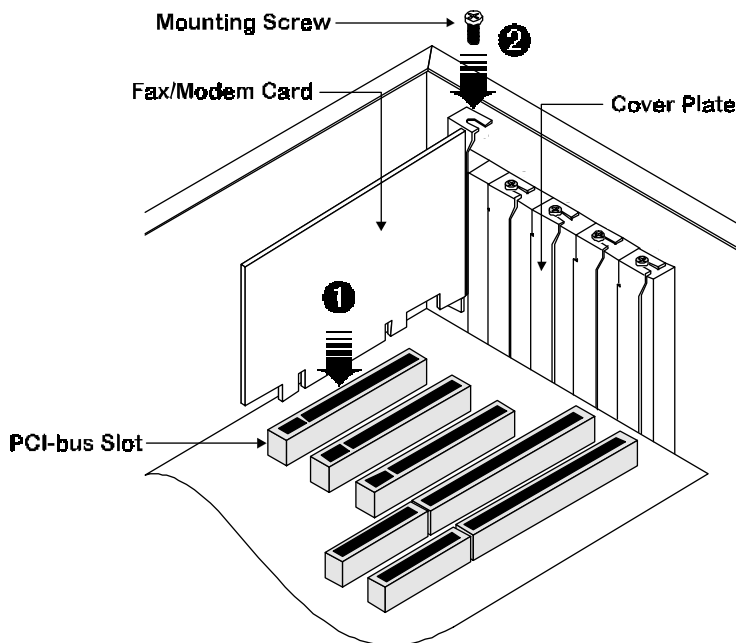

- ❶ Insert the fax/modem card firmly into a PCI-bus expansion slot.
- ❷ Secure the fax/modem card with a mounting screw.

## CONNECTING THE FAX/MODEM CARD

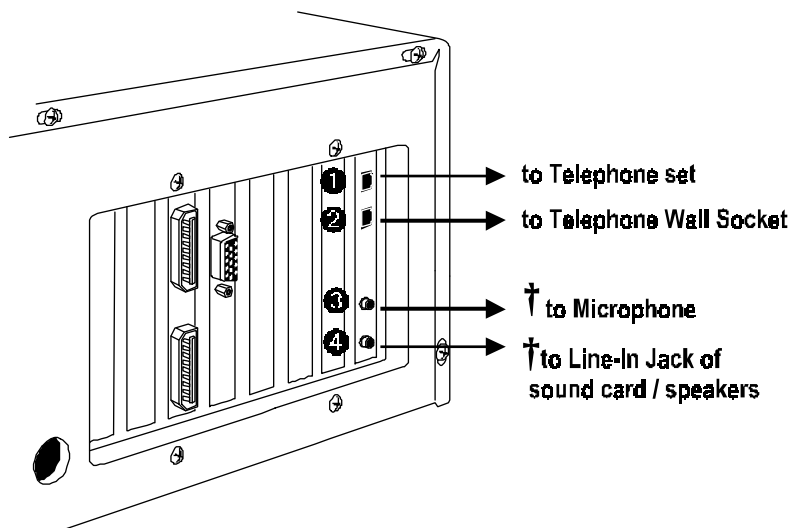

- ❶ Connect a **telephone set** to the fax/modem card.
- ❷ Connect one end of the telephone extension cord to the **fax/modem card** and the other end to the **telephone socket** on the wall.



The **Microphone** and **Line-Out Jacks** shown in the figure above is only available on the **MDP3858SP-U** model.

For users who have bought the **MDP3858SP-U** model:

- ❸ Connect a **microphone** to the fax/modem card.
- ❹ If you have a sound card in your system, connect an audio cable from the **fax/modem card's Line-Out Jack** to the **sound card's Line-In Jack**.  
If you do not have a sound card in your system, connect a pair of active/amplified speakers to the **Line-Out Jack** on the fax/modem card.

# INSTALLING THE FAX/MODEM DRIVERS FOR WINDOWS® 95

1. Start Windows® 95. Windows® 95 detects the newly-installed fax/modem card and prompts for its driver.
2. Insert the **Multimedia Communications Suite CD** into the CD-ROM drive and click **OK**.  
  
If your drivers are found on diskette, insert the **Installation Disk #1** into floppy drive and click **OK**.
3. Select the **Driver from disk provided by hardware manufacturer** option and click **OK**.
4. Type "**D:\**" in the text box and click **OK** (assuming you have placed the CD in a CD-ROM drive labelled as **D**).  
  
For drivers found on diskette, type "**A:\**" in the text box and click **OK** (assuming you have inserted the driver disk in Drive **A**).
5. Insert the **Installation Disk #2** into your floppy drive and click **OK** to install the Unimodem drivers.
6. After the Unimodem drivers have been installed, click **Yes** to restart your system (recommended).

If you have connected an audio cable from the *fax/modem card's Line-Out Jack* to a *sound card's Line-In Jack*, or

If you have connected a pair of active/amplified speakers to the *Line-Out Jack* on the fax/modem card:

7. Run the Set Audio Output utility (**Audioset.exe**) to configure the fax/modem card's audio output to the **Line-Out** option. This utility can be found on either your **Multimedia Communications Suite CD**, **Installation Disk #1** or your **\Windows** directory.

## **TESTING THE FAX/MODEM CARD**

1. From the Windows® 95 task bar, click the **Start** button.
2. Select **Settings** and click on **Control Panel**.
3. Double-click the **Modems** icon.
4. Click the **Diagnostics** tab.
5. Select the **Modem** device.
6. Click on the **More Info** button.

## **TECHNICAL SPECIFICATIONS**


- K56Flex 56Kbps data modem (upgradable to ITU standard)
- V.34 plus data modem (33.6Kbps)
- V.34 data modem (28.8Kbps)
- V.32bis
- V.32
- V.23
- V.22bis
- V.22A/B
- V.21
- Bell 212A and 103
- V.42, MNP2-4, MNP10, MNP10EC
- V.42bis and MNP5 data compression
- V.17/V.29/V.27ter and V.21 channel 2 group 3 fax mode
- VRPI and V.80 for POTS video conferencing
- Auto dialing and auto answer

- Line quality monitoring and re-train
- Tone or pulse dialing
- DAA line interface
- Caller ID support
- Built-in Buzzer and Amplifier
- Enhance AT, voice and Class 1 fax commands
- Full Duplex speakerphone
- Enhanced ADPCM/PCM voice operation with concurrent DTMF detection
- Voice monitoring function with automatic fax/voice switch
- Recording of telephone conversation through sound card
- Digital answering machine
- Power Management (*only for MDP3858V-U*)



*The product specifications herein are subjected to change without prior notifications.*

## FAX/MODEM CARD LAYOUT

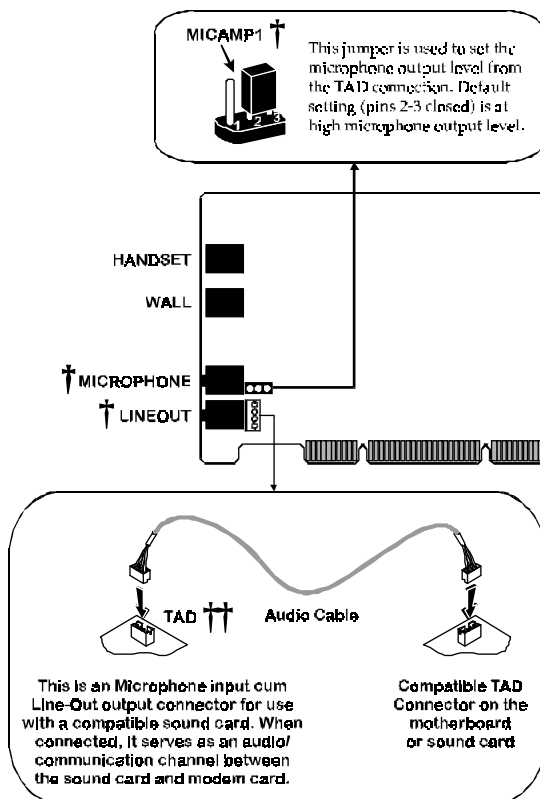

These items are only available on the **MDP3858SP-U** model.



If you have used the TAD connection, run the Set Audio Output utility (**AudioSet.exe**) to configure the fax/modem card's audio output to the Line-Out option. This utility can be found on either your **Multimedia Communications Suite CD, Installation Disk#1** or your **\Windows** directory.